



MADE IN THE USA

spyhighmounts.com
info@spyhighmounts.com

INTRODUCING THE SPY HIGH® MOUNTING SYSTEM

This mounting system is designed to assist hunters, outdoor enthusiasts & low-tech security interests in capturing great pictures or videos utilizing the highest quality parts available. This system was invented to ease the tedious and potentially hazardous methods of installing cameras the old-fashioned way.

*No more climbing & guesswork! *Help prevent animals from seeing and/or damaging cameras & ruining your pictures! *Help prevent theft of cameras from the two-legged predators.

We all know how expensive trail cameras can be--not to mention the added cost of lock boxes, which can end up getting stolen right along with your camera!

Property surveillance is a HUGE concern for homeowners, cabins, businesses, etc. Utilizing a trail camera versus an expensive home security system is a great way to protect your property.

We are excited to offer the Spy High® Mounting System to everyone! We welcome any pictures and/or videos you get using your Spy High® to feature on our website: spyhighmounts.com

Before attempting to install the mounting system your first time, we suggest practicing at eye level or slightly above to ensure correct positioning & proficiency. See How-To videos on our Facebook Page, YouTube or on our website.

CONTENTS IN COMPLETE MOUNTING SET (CAMERA NOT INCLUDED)		
(2) Extension Poles		
(2) Camera Mounts		For best results trail cameras should be mounted to camera platforms in the comfort of your home, camp or shop.
(2) Tree Attachments		Attach to a tree or other wooden source. Many users leave multiple tree attachments in key locations & only move cams as desired.
(1) Universal Camera Attachment (UCA)		Used with cameras without a bottom 1/4 20 attachment point. Cameras lacking any attachment points may be bungeed (not provided).
(1) Laser & Laser Mounting Bracket (Batteries Not Included)		Please Note WARNING Label on Laser: Do not point laser at anyone's eyes. Minors prohibited from using laser.
(1) Saw Blade Attachment (in protective cover)		Use Sawblade only for intended use.

****Drill Driver included with Complete System to allow easier installation of Tree Attachments**
NOTE: Hammer Drill is Not Recommended

ASSEMBLY

STEP 1a


ATTACH CAMERA TO MOUNTING PLATFORM

Cams w/ bottom attachment point


Rotate the camera screw clockwise while holding camera firmly. Line up the camera's lens with the triangular front pointer to center on the platform.

NOTE: Cameras are not included in the package.

Go to STEP 2

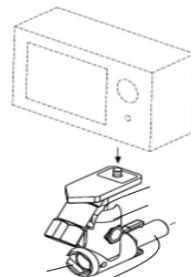

Recommended Tool

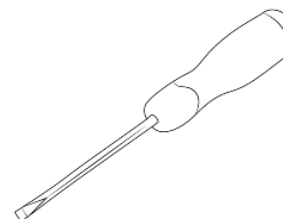

STEP 1b

ATTACH UNIVERSAL CAMERA ATTACHMENT (UCA) ONTO CAMERA MOUNTING PLATFORM


Slide the UCA onto the camera mounting platform from the back. Line up the camera screw & rotate clockwise while holding the UCA firmly.

Ensure the ball "T" screw is tight but adjustable.

Go to STEP 1C or 1D



Recommended Tool

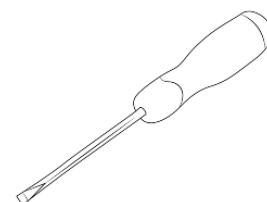

STEP 1c


ATTACH CAMERA TO UCA

Cams w/ rear attachment point


Secure camera flat in contact with the top of the camera mounting platform & against the long flat side of UCA.

Attach the UCA screw through the slot on the ribbed side turning clockwise into the camera's threaded screw hole. Before final tightening ensure the camera lens is lined up with the triangular front pointer on the center of the camera platform.

Go to STEP 2

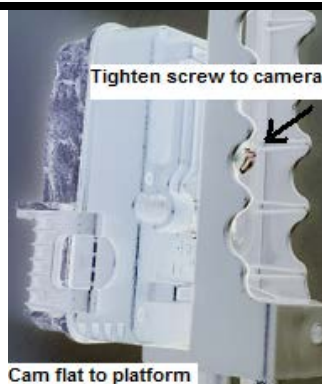

Recommended Tool(s)

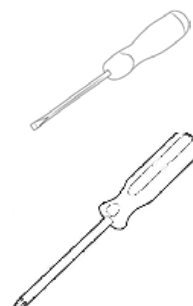

STEP 1d


ATTACH CAMERA TO UCA

Cams w/ no attachment point


Secure camera flat in contact with the top of the camera mounting platform & against the long flat side of UCA.

Using bungee cords secure through mounting devices on rear of your camera. Ensure bungees are firm, avoid wrapping around the front of camera to avoid blocking the lens & line up camera lens with the triangular front point on the center of the camera platform. This may take some experimenting to fasten securely, however, most quality cameras are equipped with the bottom or rear threaded receptacle.

Go to STEP 2

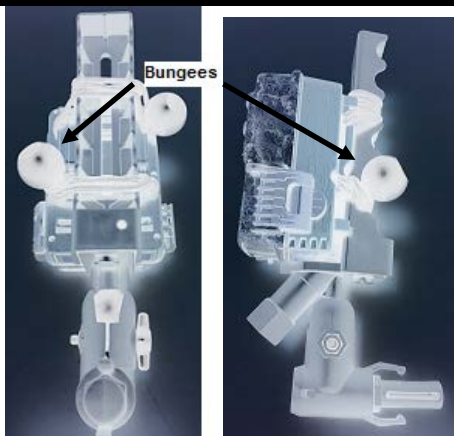

Recommended Tool

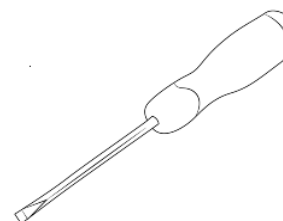

INSTALLATION

STEP 2 CONNECT TREE ATTACHMENT TO EXTENSION POLE

Line up tree attachment with extension pole & make sure it snap/locks onto the pole into either hole.



STEP 3 MOUNT TREE ATTACHMENT

Connect necessary poles & select location. For best results tree attachment should be installed at approximately a 45° degree angle. Rotating the pole(s) clockwise, twist poles to desired depth. (at least half-way into the tree or until firm, depending on bark and tree thickness).

Drill Driver (included) allows you to use a cordless drill to rapidly screw in your tree attachments. Insert the driver into your drill and place into bottom of extension pole to spin the pole, attaching tree pole to tree. For best results, use clutch-type cordless drill set at approx. 12-14.




STEP 4 CONNECT EXTENSION POLE TO CAMERA & CAMERA MOUNTING PLATFORM

Ensure the black "T" screw on the ball swivel is tight but will allow adjustment.

Snap extension pole to camera on the marked "**INSTALL**" side. The "**REMOVE**" side must only be used during camera removal from the site.

Position camera adjustment parallel to extension pole as shown by the arrow on the right.

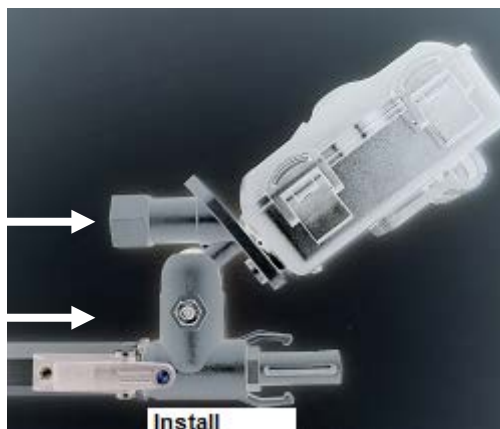

STEP 5 INSTALL CAMERA MOUNTING PLATFORM & CAMERA TO TREE ATTACHMENT

Note: Be sure to turn camera settings on before installing.

Extend pole(s) to desired height.

Line up & snap camera mounting platform onto the tree attachment.

Pull the extension pole(s) straight back towards you to ensure a smooth release.



STEP 6 ATTACH & AIM LASER

Install 2 AAA Batteries (not included)

Laser can be susceptible to cold or heat. Laser can be warmed by holding diode (light) in hand for approx. 1 min. Very seldom are batteries the issue.

Tip: Keep in pocket or use handwarmers.

Insert laser by sliding into laser bracket. Rotating the laser counterclockwise (toward the pole) will activate the push button.



STEP 7 ADJUST CAMERA

With green laser turned on, insert extension pole to adjustment port & adjust/aim laser to location you want photos to be taken. **NOTE: Laser needs to be in alignment with the green Locking Latch on the pole, as shown.**



STEP 8 CAMERA RETRIEVAL & REMOVAL

Line extension pole up with the green Locking Latch rotated to the Left and gently push/twist until it snaps into the "REMOVE" position. You will hear it click into the camera platform. Pull straight backwards and the camera platform will release.



STEP 9 SAWBLADE

DO NOT REMOVE SAW SHEATH WHILE HANDLING/INSTALLING AND REMOVING THE SAWBLADE.

Attach saw blade by snapping onto the extension pole.

Remove any branches that are obstructing camera lens & view.

WARNING BLADE IS VERY SHARP USE CAUTION

TIP: Wear gloves while handling sawblade.

Replace protective sheath before removing sawblade.

Remove sawblade by depressing extension pole release lever & carefully pulling sawblade off.



**INSTRUCTIONAL VIDEOS ON YOUTUBE,
FACEBOOK (SPY HIGH MOUNTING SYSTEM)
AND OUR WEBSITE:**

www.spyhighmounts.com

REMINDER: PRACTICE AT EYE LEVEL FIRST

Please send us some of your great pictures and videos to feature on our website!

Good luck from Spy High Mounting System!



MADE IN THE USA

spyhighmounts.com
info@spyhighmounts.com



**SCAN WITH YOUR SMARTPHONE!
INSTRUCTIONAL VIDEO
On YouTube
COMPLETE SYSTEM**

**SCAN WITH YOUR SMARTPHONE!
ADAPTER SET VIDEO
(WITH CUSTOMER-SUPPLIED
EXTENSION POLES)**



WARRANTY, DISCLAIMER

Introduction

The warranty obligations of Spy High, LLC ("Spy High®") for its products are limited to the terms set forth below:

Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

How Long Does this Coverage Last

This limited warranty (the Warranty Period) lasts for 60 days from the date of original purchase of this product. Proof of purchase date is required.

What is Covered

This limited warranty covers defects in materials and/or workmanship in this product. Replacement or repaired products are warranted as above only for the remainder of the original Warranty Period.

What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any improper or unreasonable installation, alteration, modification, misuse, abuse, accident, neglect, exposure to excess moisture, fire, lightning, power surges, or other acts of nature.

Nor does it cover removal or installation of this product, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Spy High® to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.

This limited warranty does not cover any installation mishaps, personal injury, damage to trees, structures, or any other property on which the product was installed, nor attached accessories of any kind, including but not limited to cameras. Warranty coverage is limited to repair or replacement of the product only. Any and all consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Without limiting any other exclusion herein, Spy High® does not warrant that the product covered hereby will remain compatible with any other product or technology with which the product may be used.



MADE IN THE USA

spyhighmounts.com
info@spyhighmounts.com

This limited warranty does not cover any product purchased through non-authorized dealers. Receipts from non-authorized dealers are NOT acceptable for warranty verification.

What Spy High® Will Do

Spy High® will, at its sole option, provide one of the following remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair any defective parts within a reasonable period of time, free of any charge to complete the repair and restore the product to its proper operating condition; or,
 2. Replace the product with a direct replacement or with a similar product, including a factory certified product, deemed by us to perform substantially the same function as the original product. Replacement products will be furnished only on an exchange basis.
- If you live in the United States, we will also pay the shipping costs necessary to return the product to you once the repair is complete.

What Spy High® Will Not Do

Under This Limited Warranty Products are to be sent prepaid to us. We also recommend that you insure the shipment. If the product is returned uninsured, you assume all risks of loss or damage during shipment. Spy High® will not be responsible for any costs or damages related to the removal or reinstallation of the product.

How to Obtain a Remedy Under This Limited Warranty

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Spy High® reseller. If this product is returned under this limited warranty, a Return Authorization number (RA#), obtained from Spy High®, will be required. If it is decided that this product should be returned directly to Spy High®, this product should be properly packed and sent to:

Spy High Mounting System
P. O. Box 6455
Great Falls, MT 59406

The RA number should be clearly marked on the outside of the package. Returns arriving without an RA number on the outside, may result in loss to you of both the product(s) in the package as well as any applicable remedy you would have received under the limited warranty.

If You Reside Outside the United States

If you live outside the United States, warranty matters are handled by your local dealer. You should go to your local Authorized Dealer with your claim. Have a copy of the original proof of purchase. The authorized Spy High® dealer will validate the claim and call us direct to arrange for a Return Authorization number. They will handle your claim for you.

Limitation on Liability

THE MAXIMUM LIABILITY OF SPY HIGH® UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, SPY HIGH® IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY.

Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, ROWE ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF SPY HIGH™ CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state. This limited warranty is void if the label bearing the UPC number of this product has been removed or defaced.